

STANDARD DEPARTURE CHART-
INSTRUMENT (SID)-ICAO

TRANSITION ALTITUDE
4000 FT

TWR 122.700, 121.100
121.900
ATIS 126.400



AHWAZ
RWY 12/30
EGVAX 1A/1B/1C/1D

ALL DIRECTIONS ARE MAGNETIC,
LEVEL AND ELEVATIONS ARE IN FEET,
DISTANCES ARE IN NAUTICAL MILES.

CTR and ATZ class "D".



NOT TO SCALE

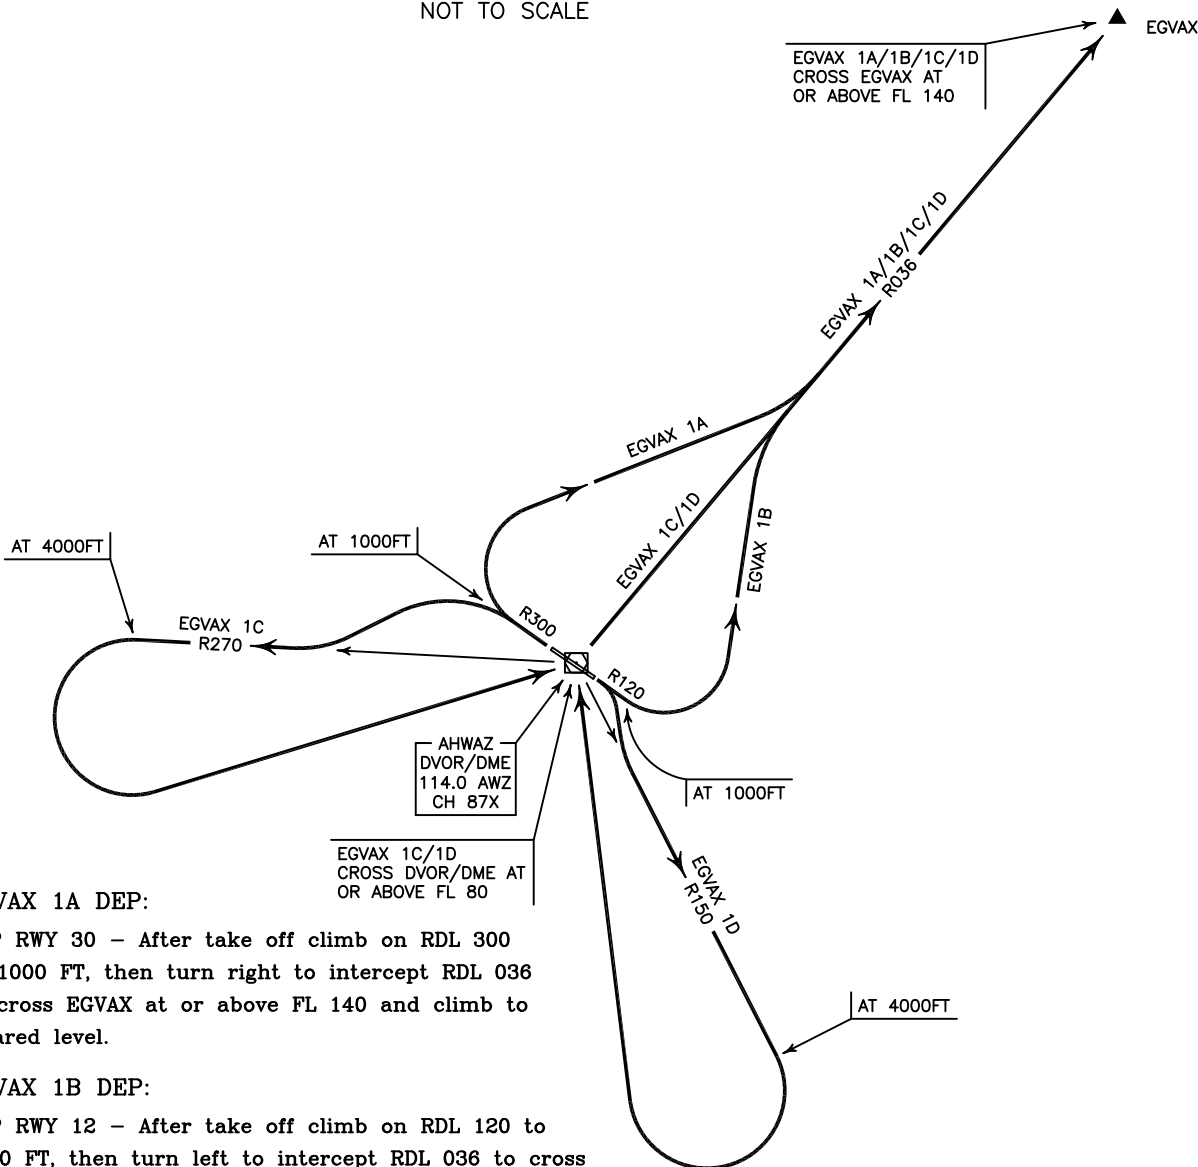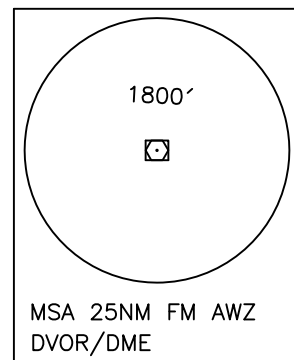

EGVAX 1A DEP:

DEP RWY 30 - After take off climb on RDL 300 to 1000 FT, then turn right to intercept RDL 036 to cross EGVAX at or above FL 140 and climb to cleared level.

EGVAX 1B DEP:

DEP RWY 12 - After take off climb on RDL 120 to 1000 FT, then turn left to intercept RDL 036 to cross EGVAX at or above FL 140 and climb to cleared level.

EGVAX 1C DEP:

DEP RWY 30 - After take off climb on RDL 300 to 1000 FT, then turn left to intercept RDL 270 to 4000 FT, then turn left cross AWZ DVOR/DME at or above FL 80, then intercept RDL 036 to cross EGVAX at or above FL 140 and climb to cleared level.

EGVAX 1D DEP:

DEP RWY 12 - After take off turn right climb on RDL 150 to 4000 FT, then turn right cross AWZ DVOR/DME at or above FL 80, then intercept RDL 036 to cross EGVAX at or above FL 140 and climb to cleared level.