
WEF 1 DEC 22

STANDARD DEPARTURE CHART-INSTRUMENT (SID)-ICAO

TRANSITION ALTITUDE 4000 FT

TWR 122.700 121.100 121.900 ATIS 126.400 AHWAZ RWY 12/30 EGVAX 1E/1F/1G/1H

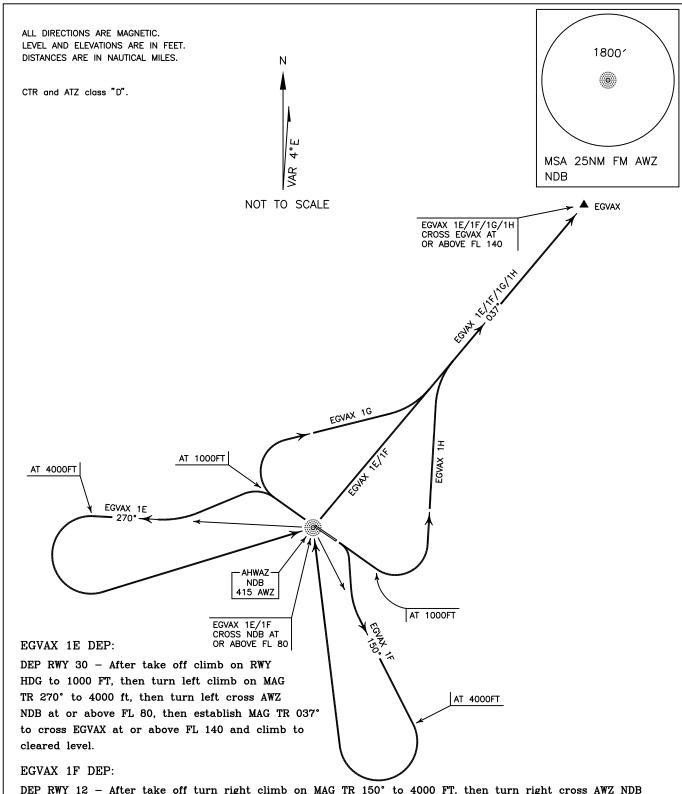

DEP RWY 12 - After take off turn right climb on MAG TR 150° to 4000 FT, then turn right cross AWZ NDB at or above FL 80, then establish MAG TR 037° to cross EGVAX at or above FL 140 and climb to cleared level.

## EGVAX 1G DEP:

DEP RWY 30 - After take off climb on RWY HDG to 1000 FT, then turn right to establish MAG TR 037° to cross EGVAX at or above FL 140 and climb to cleared level.

## EGVAX 1H DEP:

DEP RWY 12 - After take off climb on RWY HDG to 1000 FT, then turn left to establish MAG TR 037° to cross EGVAX at or above FL 140 and climb to cleared level.