

STANDARD DEPARTURE CHART-
INSTRUMENT (SID)-ICAO

TRANSITION LEVEL FL 110
TRANSITION ALTITUDE 9000 FT

INFO 118.400 121.650 ATIS 127.050

KARAJ/PAYAM
RWY 12/30
NAGMO 1E/1F
DHN 1G/1H, RUS 2E/2F

All departure from Payam AD are subject to Mehrabad approach clearances.

NAGMO 1E DEP:

DEP RWY 30 - After take off climb on RDL 300 to 5500 FT, then turn left to cross PIM VOR/DME at or above 7000 FT, then proceed on RDL 097 FM PIM VOR/DME (RDL 277 FM TRN DVOR/DME) to cross TRN DVOR/DME at or above FL 130, then turn left to intercept RDL 005 FM TRN DVOR/DME to NAGMO and climb to cleared level.

NAGMO 1F DEP:


DEP RWY 12 - After take off climb on RDL 120 to 5500 FT, then turn right to cross PIM VOR/DME at or above 7000 FT, then turn right proceed on RDL 097 FM PIM VOR/DME (RDL 277 FM TRN DVOR/DME) to cross TRN DVOR/DME at or above FL 130, then turn left to intercept RDL 005 FM TRN DVOR/DME to NAGMO and climb to cleared level.

DHN 1G DEP:

DEP RWY 30 - After take off climb on RDL 300 to 5500 FT, then turn left to cross PIM VOR/DME at or above 7000 FT, then proceed on RDL 097 FM PIM VOR/DME (RDL 277 FM TRN DVOR/DME) to cross TRN DVOR/DME at or above FL 130, then turn right to intercept RDL 107 FM TRN DVOR/DME to DHN VOR/DME and climb to cleared level.

DHN 1H DEP:

DEP RWY 12 - After take off climb on RDL 120 to 5500 FT, then turn right to cross PIM VOR/DME at or above 7000 FT, then turn right proceed on RDL 097 FM PIM VOR/DME (RDL 277 FM TRN DVOR/DME) to cross TRN DVOR/DME at or above FL 130, then turn right to intercept RDL 107 FM TRN DVOR/DME to DHN VOR/DME and climb to cleared level.

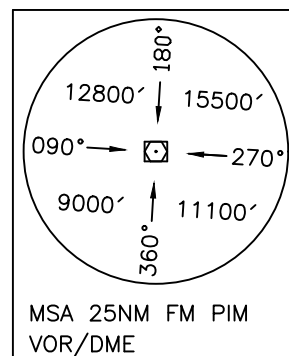

NOT TO SCALE

