


STANDARD DEPARTURE CHART-
INSTRUMENT (SID)-ICAO

TRANSITION ALTITUDE
4000 FT

APP 124.200
TWR 118.100
121.900
ATIS 128.650

BANDAR ABBASS/BANDAR ABBASS
RWY 03R/21L
MOBON 1A/1B/1D

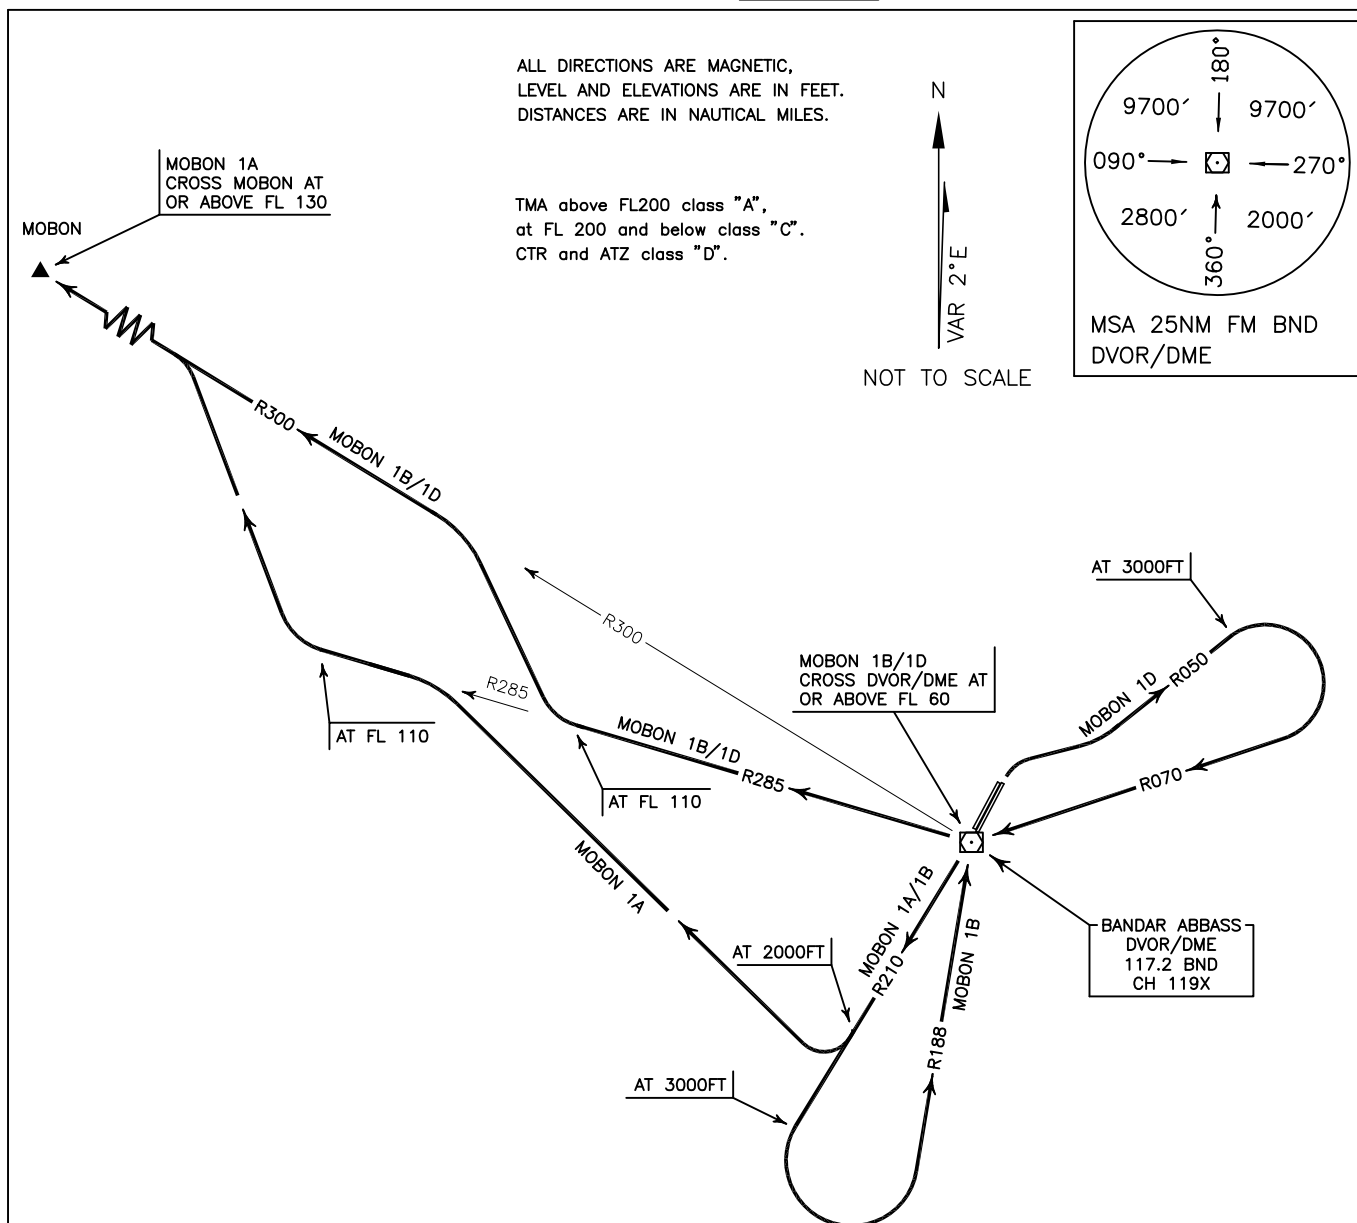

MOBON 1A DEP:

DEP RWY 21L - After take off climb on RDL 210, at 2000 FT turn right to intercept RDL 285, at FL 110 turn right to intercept RDL 300 to cross MOBON at or above FL 130 and climb to cleared level.

MOBON 1B DEP:

DEP RWY 21L - After take off climb on RDL 210, at 3000 FT turn left to intercept RDL 188 to cross BND DVOR/DME at or above FL 60 then turn left to intercept RDL 285, at FL 110, turn right to intercept RDL 300 to MOBON and climb to cleared level.

MOBON 1D DEP:

DEP RWY 03R - After take off turn right climb on RDL 050, at 3000 FT turn right to intercept RDL 070 to cross BND DVOR/DME at or above FL 60 then intercept RDL 285, at FL 110, turn right to intercept RDL 300 to MOBON and climb to cleared level.