


BANDAR ABBASS/BANDAR ABBASS
RWY 03R/21L
MOBON 1E/1F/1H

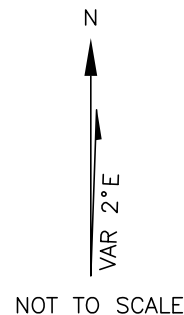

DEP RWY 03R - After take off turn right climb on BRG 050° at 3000 FT turn right to establish BRG 070° to cross BND NDB at or above FL 60 then establish BRG 285° at FL 110 turn right to establish BRG 300° to MOBON and climb to cleared level.