


STANDARD DEPARTURE CHART-
INSTRUMENT (SID)-ICAO

TRANSITION ALTITUDE 8000 FT
TRANSITION LEVEL FL 100

INFO 118.150 121.900


SABZEVAR
RWY 09/27
BONEM 1A/1B

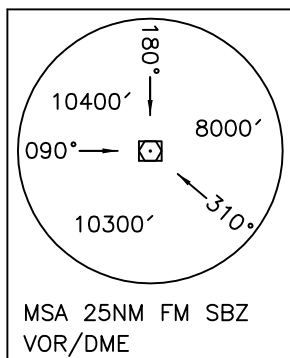

ALL DIRECTIONS ARE MAGNETIC.
LEVEL AND ELEVATIONS ARE IN FEET.
DISTANCES ARE IN NAUTICAL MILES.

ATZ class "G".

N
VAR 3°30'E
NOT TO SCALE

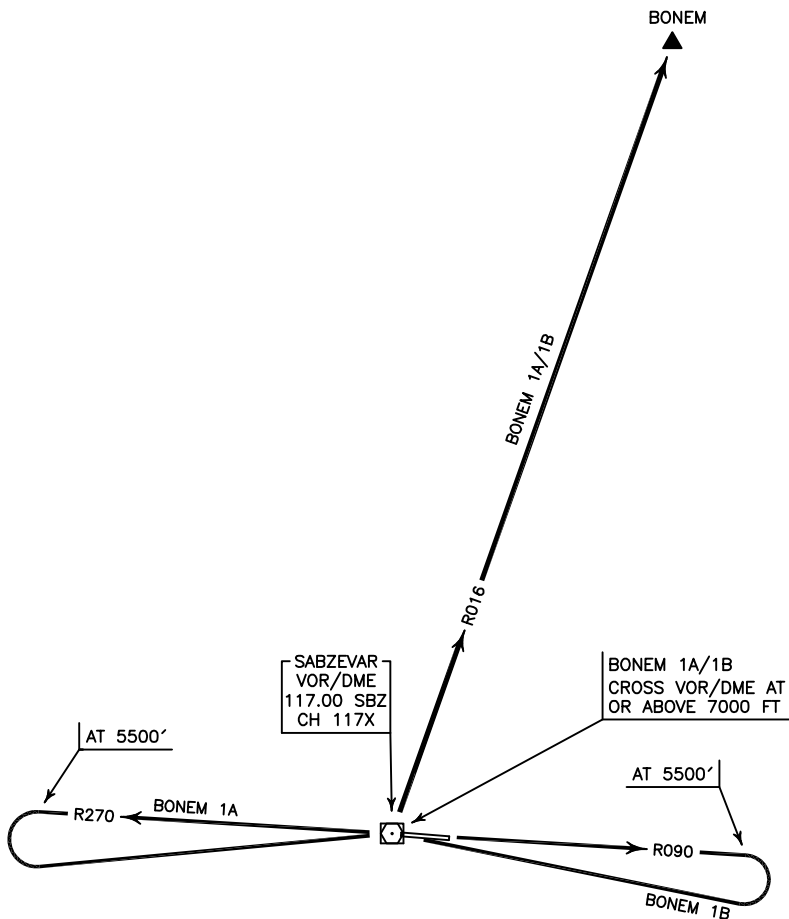

BONEM 1A DEP:

DEP RWY 27 - After take off climb on RDL 270 to 5500 FT, then turn left to cross overhead SBZ VOR/DME at or above 7000 FT, then intercept RDL 016 to BONEM and climb to cleared level.

BONEM 1B DEP:

DEP RWY 09 - After take off climb on RDL 090 to 5500 FT, then turn right to cross overhead SBZ VOR/DME at or above 7000 FT, then intercept RDL 016 to BONEM and climb to cleared level.