

STANDARD DEPARTURE CHART—
INSTRUMENT (SID)—ICAO

TRANSITION ALTITUDE
3000 FT



APP 123.400
TWR 125.200, 121.700

CHAH BAHAR/KONARAK
RWY 09L/R 27L/R
EGNEX 1E/1F/1G/1H

ALL DIRECTIONS ARE MAGNETIC.
LEVEL AND ELEVATIONS ARE IN FEET.
DISTANCES ARE IN NAUTICAL MILES.

N
VAR 1°E

NOT TO SCALE

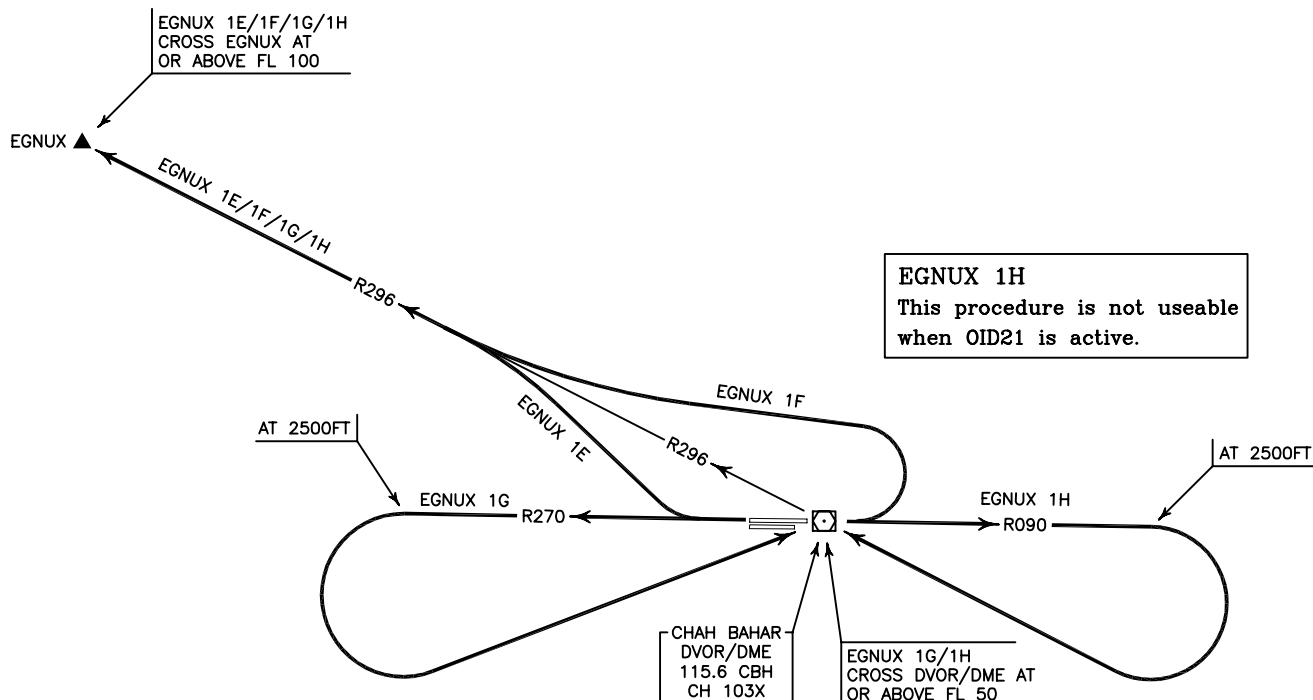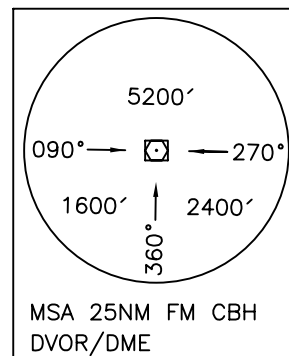

EGNEX 1E DEP:

DEP RWY 27L/R – After take off turn right climb on RDL 296 to cross EGNEX at or above FL 100 and climb to cleared level.

EGNEX 1F DEP:

DEP RWY 09L/R – After take off turn left climb on RDL 296 to cross EGNEX at or above FL 100 and climb to cleared level.

EGNEX 1G DEP:

DEP RWY 27L/R – After take off climb on RDL 270 to 2500 FT, then turn left to cross CBH DVOR/DME at or above FL 50, then turn left to intercept RDL 296 to cross EGNEX at or above FL 100 and climb to cleared level.

EGNEX 1H DEP:

DEP RWY 09L/R – After take off climb on RDL 090 to 2500 FT, then turn right to cross CBH DVOR/DME at or above FL 50, then intercept RDL 296 to cross EGNEX at or above FL 100 and climb to cleared level.

NOTE: This procedure is not useable when OI21 is active.